



# IP150 2-PCI Riser Card

User's Guide  
Ver 1.0

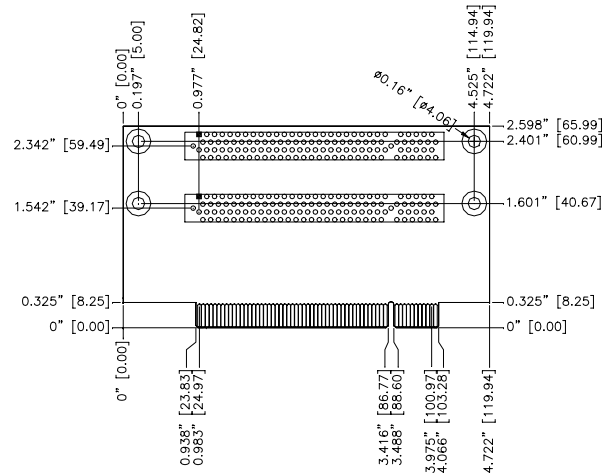

Dimension Drawing of IP150

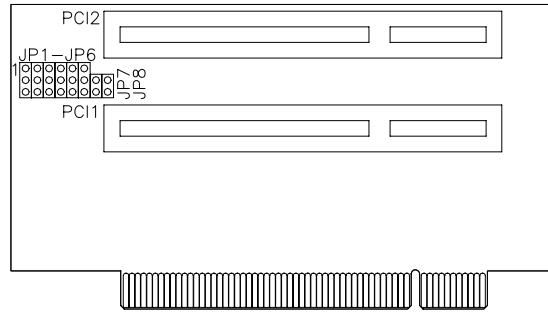

Connectors Drawing of IP150

## Jumper Settings:

Use the following jumpers to configure the riser card for use with either IB830 or I815E mainboards.

### JP1, JP2, JP3, JP4, JP5: For IB830 / I815E Board

Jumper	Setting	Function
	Pin 1-2 Short/Closed	Use card with IB830
	Pin 2-3 Short/Closed	Use card with I815E

### JP6: For IB830 / I815E Board

Jumper	Setting	Function
	Pin 1-2 Short/Closed	Use card with I815E
	Pin 2-3 Short/Closed	Use card with IB830

### JP7: For IB830 / I815E Board

Jumper	Setting	Function
	Jumper Closed	Use card with I815E
	Jumper Open	Use card with IB830

### JP8: For IB830 / I815E Board

Jumper	Setting	Function
	Jumper Closed	Use card with IB830
	Jumper Open	Use card with I815E

## Routing Table:

IB830	PCI1	PCI2
IDSEL	AD31	AD30
INTA#	B	C
INTB#	C	D
INTC#	D	A
INTD#	A	B

I815E	PCI1	PCI2
IDSEL	AD21	AD20
INTA#	C	B
INTB#	D	C
INTC#	A	D
INTD#	B	A